



INSTALLATION INSTRUCTIONS

For Flat Seated Bolted SR7A / SRPT Disk Holders

Rupture Disk Series: SRA

1) WARNING

- a) Read the complete instructions before attempting to install the rupture disk and holder assembly.
- b) It is the user's responsibility for the design of adequate venting and installation of adequate vent piping or directional flow after rupture occurs with the rupture disk as intended. When size is specified, ZOOK assumes that adequate provisions have been made by the purchaser and/or user for proper venting of a system to relieve the specific pressure. Locate the rupture disk where people or property will not be exposed to the system discharge in the event of rupture. Vent toxic or flammable fumes to a safe location to prevent personnel injury or property damage.
- c) It is the user's responsibility to specify the burst pressure rating at the coincident temperature at which the rupture disk is to be used. A rupture disk is a temperature sensitive device. The burst pressure of the rupture disk is directly affected by its exposure to the coincident temperature. Failure to utilize a rupture disk at the specified coincident temperature could cause premature failure or overpressurization of the system.
- d) Particles may discharge when the rupture disk ruptures. These particles may be part of the rupture disk itself, or other environmental matter in the system. It is the user's responsibility to ensure that the particles are directed to a safe area to prevent personnel injury or property damage.
- e) Rupture disk service life is affected by corrosion, creep and fatigue, and physical damage. These conditions will derate the rupture disk to a lower pressure. The user should be prepared to handle a premature failure of the rupture disk. The media or other environmental conditions should not allow for any build-up or solidification of media on the rupture disk. This may increase the burst rating of the rupture disk.
- f) ZOOK rupture disks, when installed in their respective holders correctly, will provide a very good seal for liquids and most gases or vapors. However, ZOOK cannot guarantee the leakage rate of the disk seal without prior knowledge of the requirement and details of the piping layout. Consult ZOOK for guidance if leakage is critical to the installation.
- g) The customer and/or its installer shall be responsible for the proper installation of rupture disk device into a system. **Recommended torque values do not consider piping stress or alignment.**
- h) Customer and/or its installers shall be responsible for improper installation and physical damage resulting therefrom, including, but not limited to, damage resulting from leakage, improper torquing, and/or failure to follow installation instructions.
- i) ZOOK standard Terms and Conditions of Sale apply unless otherwise stated in writing by the manufacturer.

2) HOLDER INSPECTION AND PREPARATION – NEW HOLDERS

- a) Carefully remove the rupture disk holder from its packaging and disassemble by removing the pre-assembly tab screws for insert type holders, or pre-assembly capscrews for pre-torque and bolted type holders, and lift the outlet flange up and set aside. Discard the brown shipping paper sandwiched between the two halves of the holder.
- b) Wipe with a clean cloth and suitable solvent to remove all rust inhibitors and foreign material.
- c) Inspect the seat area for any scratches, dents, or nicks. Imperfections on these surfaces can cause leaks. DO NOT USE if any scratches, dents or nicks are detected, contact ZOOK immediately for instructions.
- d) The holder must not be machined or modified in any way without prior written approval from ZOOK.

3) HOLDER INSPECTION AND PREPARATION – EXISTING HOLDERS

- a) For existing installations remove the complete assembly (disk and holder) from the piping by removing the companion flange studs and nuts and place on a clean flat surface.
- b) Disassemble the assembly by removing the pre-assembly tab screws for insert type holders, or preassembly capscrews for pre-torque and bolted type holders, and lift the outlet flange up and set aside.
- c) Remove the used rupture disk from the holder.
- d) Inspect the holder's mating surfaces for foreign material. Remove any adhered gasket material from the previous installation and clean the gasket surfaces of the holder thoroughly. Dirt and grit on these surfaces can cause leaks.
- e) Inspect the seat area for any scratches, dents, or nicks. Imperfections on these surfaces can cause leaks.
DO NOT SCRAPE OR SCRATCH any seating surface. If wiping these surfaces with a clean cloth and suitable solvent does not remove surface residue, fine emery cloth or steel wool may be utilized. Care should be exercised not to exert sufficient pressure on the emery cloth or steel wool to cut or groove these sealing surfaces. DO NOT USE if any scratches, dents or nicks cannot be removed, contact ZOOK immediately for instructions.
- f) The holder must not be machined or modified in any way without prior written approval from ZOOK.

www.zookdisk.com

Serving America, Central & South America
16809 Park Circle Drive, Chagrin Falls,
Ohio 44022 USA
Toll Free: +1 800 543 1043
Phone: +1 440 543 1010
E-mail: sales@zookdisk.com

Serving Europe, Middle East & Africa
Navigation House, Bridge Street
Killamarsh, Sheffield,
S21 1AL UK
Phone: +44 (0) 1909 560999
E-mail: sales.europe@zookdisk.com

Serving Canada
4400 South Service Rd,
Burlington, Ontario L7L 5R8 CA
Toll Free: +1 800 370 6057
Phone: +1 905 681 2885
E-mail: sales.canada@zookdisk.com

Serving Asia Pacific
Unit No.23A-05, Menara Landmark, No.12,
Jalan Ngee Heng
80000 Johor Bahru, Johor, Malaysia
Phone: +60 (7) 2910099
E-mail: sales.asia@zookdisk.com



INSTALLATION INSTRUCTIONS

For Flat Seated Bolted SR7A / SRPT Disk Holders

Rupture Disk Series: SRA

4) ASSEMBLY OF THE RUPTURE DISK AND HOLDER

- a) **CAUTION:** All ZOOK rupture disks are recommended for installation into holders manufactured by ZOOK ONLY.
- b) **CAUTION:** Rupture disks are precision instruments and must be handled with extreme care. Rupture disks should be installed only by qualified personnel familiar with rupture disks and proper piping practice.
- c) **CAUTION:** ZOOK does not recommend reinstalling a rupture disk that has been removed from its holder. Reinstallation may adversely affect the sealing capabilities and/or the performance of the rupture disk.
- d) Place the holder inlet on a clean flat work surface with the flow arrows pointing up from the work surface.
- e) Carefully remove the disk from its package.
- f) Examine the disk carefully before installation. **DO NOT USE IF THERE IS ANY INDICATION OF DAMAGE.** Handle with extreme care.
- g) Place the disk onto the inlet with the flow arrows pointing up from the work surface so the convex (dome) side of the disk faces down towards the work surface and the three (3) alignment pin located in the inlet holder are engaged with the corresponding slots in the disk flange. **DO NOT USE A GASKET.**
- h) Carefully align and place the outlet flange into the inlet with the three (3) alignment pins located in the inlet holder engaged with the corresponding holes in the outlet and the with the flow arrows pointing up from the work surface.
- i) For "insert" type SR7A holders, fasten the assembly together by reinstalling the pre-assembly tabs and screws as shown in figure 1. The pre-assembly screws should be snug, NOT wrench-tight.
- j) For "pre-torque" type SRPT holders, fasten the assembly together by reinstalling the pre-assembly capscrews as shown in figure 2 finger tight before torquing. 12 point high strength capscrews are supplied with the assembly, DO NOT SUBSTITUTE. A 12 point, deep length, thinwall socket is required for correct torquing.
 - (1) Using a torque wrench, develop the required torque incrementally in a minimum of four (4) steps in a crisscross pattern. The initial torque should be no more than 30% of the final required torque listed in table #1. After following this sequence, a final tightening should be performed copscrew-to-capscrew to ensure that all bolts have been evenly torqued.

5) INSTALLATION OF THE ASSEMBLY (DISK AND HOLDER) INTO THE SYSTEM

To achieve a high degree of success in attaining accurate burst pressures and a leak-free joint, several steps are required. **It is imperative that a regimented bolt-up procedure is applied.**

- a) Inspect the Companion Flanges:
 - (1) Before installing the assembly into the system, ensure that the companion flange gasket surfaces are clean and free from all rust, corrosion, and foreign material. The allowable imperfections in the flange gasket surface should not exceed the depth of the surface finish grooves, and that the radial marks are no deeper than the depth of the flange surface finish and less than 50% in length of the overall gasket sealing surface width.
 - (2) To assure proper sealing of the assembly and flange gaskets parallelism, flatness, and waviness should be within 0.008" (0.2mm) or better.
- b) Insert the assembly between the companion flanges insuring that **ALL FLOW ARROWS POINTING IN THE PROPER DIRECTION.** The concave hollow side of the disk should be facing towards the process pressure.
- c) Install new gaskets between the assembly and the companion flanges. We recommend compressed fiber gasket no greater than 1/16" (1.6mm) thick. The user is cautioned to select a gasket material that is suitable for the intended service and will resist "cold flow". In the event of cold flowing of the gaskets, the assembly torque will relax in non-pre-torqueable holders, which can result in erratic bursting of the rupture disk and/or leakage.
- d) Do not apply any compounds to the gasket or seating surfaces.
- e) Reinstall companion flange studs and nuts, making sure they are free of any foreign matter, and well lubricated. Lubricate the nut bearing surfaces as well. Lubrication is not required if PTFE coated fasteners are used.
- f) **WARNING:** If the assembly is installed upside down, the burst pressure may exceed the marked burst pressure. **PAY CLOSE ATTENTION TO THE DIRECTIONAL ARROWS ON THE DISK AND HOLDER.**
- g) **WARNING:** The disk tag is designed to provide critical information about the Rupture Disk only and should NOT be used as a hand hold to lift or adjust the assembly during installation. This practice can damage the disk resulting in failure of the disk below its marked burst pressure.
- h) Run-up all nuts finger tight while maintaining parallelism in accordance with 5.a.2.
- i) Using a torque wrench, develop the required torque incrementally in a minimum of four (4) steps in a crisscross pattern. The initial torque should be no more than 30% of the final required torque listed in table #1A & #1B. After following this sequence, a final tightening should be performed bolt-to-bolt to ensure that all bolts have been evenly torqued.
 - (1) The use of hardened washers will enhance the installation by reducing the friction due to possible galling of the nut bearing surfaces.
- j) Verify parallelism is in accordance with 5.a.2.
- k) Companion flange torque values should be verified periodically at the system temperature.

www.zookdisk.com

Serving America, Central & South America
16809 Park Circle Drive, Chagrin Falls,
Ohio 44022 USA
Toll Free: +1 800 543 1043
Phone: +1 440 543 1010
E-mail: sales@zookdisk.com

Serving Europe, Middle East & Africa
Navigation House, Bridge Street
Killamarsh, Sheffield,
S21 1AL UK
Phone: +44 (0) 1909 560999
E-mail: sales.europe@zookdisk.com

Serving Canada
4400 South Service Rd,
Burlington, Ontario L7L 5R8 CA
Toll Free: +1 800 370 6057
Phone: +1 905 681 2885
E-mail: sales.canada@zookdisk.com

Serving Asia Pacific
Unit No.23A-05, Menara Landmark, No.12,
Jalan Ngee Heng
80000 Johor Bahru, Johor, Malaysia
Phone: +60 (7) 2910099
E-mail: sales.asia@zookdisk.com

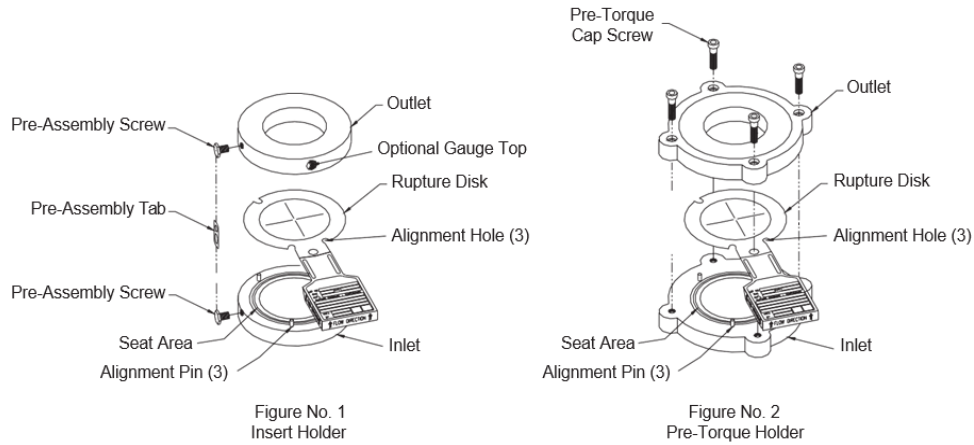


Table #1A – Recommended Torque Table

Size		Flange Series		Pre-assembly Cap Screws Torque (For Pre-torque SRPT Holders Only)			Companion Flange Bolting Torque		
IN	MM	ANSI	DIN	12 Point Socket Size	FT-LBS	N-M	FT-LBS	N-M	
1"	13	150	10/16	1/4	10	26	20	26	
		300	25/40	1/4	16	41	40	41	
		600	64/100	1/4	16	41	40	55	
		900	-	-	-	-	-	122	-
		1500	160/250	-	-	-	-	122	119
1-1/2"	40	150	10/16	5/16	16	21	25	43	
		300	25/40	5/16	32	43	80	91	
		600	64/100	5/16	32	43	80	91	
		900	-	-	-	-	-	182	-
		1500	160	-	-	-	-	182	155
		-	250	-	-	-	-	-	194
2"	50	150	10/16	3/8	24	33	40	55	
		300	25/40/64	3/8	32	48	65	109	
		600	100	3/8	32	48	65	137	
		900	-	-	-	-	-	122	-
		1500	160	-	-	-	-	122	298
		-	250	-	-	-	-	-	149
3"	80	150	10/16	7/16	35	47	50	34	
		300	25/40/64	7/16	93	127	80	91	
		600	100	7/16	93	127	80	114	
		900	-	7/16	139	-	122	-	
4"	100	150	10/16	7/16	63	85	45	61	
		300	25/40	7/16	91	123	85	102	
		600	64	3/8	51	70	120	146	
		-	100	3/8	-	70	-	176	
		900	-	1/2	122	-	275	-	
6"	150	150	10/16	3/8	48	64	95	108	
		300	25/40	3/8	58	79	80	171	
		400	-	7/16	98	-	130	-	
		600	64	7/16	91	123	180	389	
		-	100	7/16	-	-	-	259	

Note 1 - Torque values assume the threads are lightly oiled and free running.
 Note 2 - For some installation increased torque may be required for sealing. Consult ZOOK for increased torque values.
 Note 3 - Companion flange torque values should be verified periodically at the system temperature.

www.zookdisk.com

Serving America, Central & South America
 16809 Park Circle Drive, Chagrin Falls,
 Ohio 44022 USA
 Toll Free: +1 800 543 1043
 Phone: +1 440 543 1010
 E-mail: sales@zookdisk.com

Serving Europe, Middle East & Africa
 Navigation House, Bridge Street
 Killamarsh, Sheffield,
 S21 1AL UK
 Phone: +44 (0) 1909 560999
 E-mail: sales.europe@zookdisk.com

Serving Canada
 4400 South Service Rd,
 Burlington, Ontario L7L 5R8 CA
 Toll Free: +1 800 370 6057
 Phone: +1 905 681 2885
 E-mail: sales.canada@zookdisk.com

Serving Asia Pacific
 Unit No.23A-05, Menara Landmark, No.12,
 Jalan Ngee Heng
 80000 Johor Bahru, Johor, Malaysia
 Phone: +60 (7) 2910099
 E-mail: sales.asia@zookdisk.com



INSTALLATION INSTRUCTIONS

For Flat Seated Bolted SR7A / SRPT Disk Holders
Rupture Disk Series: SRA

www.zookdisk.com

Serving America, Central & South America
16809 Park Circle Drive, Chagrin Falls,
Ohio 44022 USA
Toll Free: +1 800 543 1043
Phone: +1 440 543 1010
E-mail: sales@zookdisk.com

Serving Europe, Middle East & Africa
Navigation House, Bridge Street
Killamarsh, Sheffield,
S21 1AL UK
Phone: +44 (0) 1909 560999
E-mail: sales.europe@zookdisk.com

Serving Canada
4400 South Service Rd,
Burlington, Ontario L7L 5R8 CA
Toll Free: +1 800 370 6057
Phone: +1 905 681 2885
E-mail: sales.canada@zookdisk.com

Serving Asia Pacific
Unit No.23A-05, Menara Landmark, No.12,
Jalan Ngee Heng
80000 Johor Bahru, Johor, Malaysia
Phone: +60 (7) 2910099
E-mail: sales.asia@zookdisk.com